



Innovation in Mobility

FOLDOVERTM
FR2-3000 Series
Low-Floor Vehicle
Access Ramp
for
Transit Buses

[PRINT ENTIRE MANUAL](#)

[TABLE OF CONTENTS](#)

SERVICE MANUAL

This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.

Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.

REVISION RECORD

REVISION	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DFR106. D	5-10	Updated drawing for reference # 7 (18668).	3774/None
	5-12, 5-13	Added reference # 14 (19963). Updated drawing and reference numbers 5, 6, 7, 9 and 10.	
	5-5, 5-7, 5-9	Added 19975 Bushing Rebuild Kit to parts lists.	
	5-6 &5-7	Added 17192 Heater Mat (reference # 16) to drawing and parts list.	
	3-11	Added J5 to diagram.	
	1-2	Changed warranty coverage to two years, P&L.	
	5-9	Added to ref #6 (22263).	3814/4816
	Inside cover	Updated disclaimer on inside cover.	3990/4918

TABLE OF CONTENTS

<i>Chapter</i>		<i>Page</i>
I.	RAMP INTRODUCTION	1-1
A.	RICON PRODUCT SUPPORT	1-1
B.	RICON LIMITED WARRANTY	1-1
C.	SHIPPING INFORMATION	1-3
D.	GENERAL SAFETY PRECAUTIONS	1-3
II.	RAMP DESCRIPTION	2-1
A.	RAMP FEATURES.....	2-1
1.	INTERLOCK SUPPORT	2-1
2.	AUDIBLE ALERT	2-1
3.	RAMP CONTROL PANEL	2-1
B.	RAMP CAPACITY	2-2
C.	MAJOR COMPONENTS.....	2-3
D.	RAMP SPECIFICATIONS	2-5
III.	RAMP MAINTENANCE	3-1
A.	GENERAL SAFETY PRECAUTIONS	3-1
B.	DAILY INSPECTION	3-1
C.	MAINTENANCE SCHEDULE.....	3-3
D.	RAMP COMPONENT INFORMATION	3-3
1.	NEEDLE VALVES.....	3-3
2.	DIVERTER VALVE	3-3
3.	DIRECTIONAL VALVE	3-3
4.	CONTROLLER	3-4
5.	CIRCUIT BREAKERS AND FUSES	3-6
6.	RAMP ARM ASSEMBLY	3-6
E.	ELECTRICAL AND HYDRAULIC DIAGRAMS.....	3-7
IV.	RAMP TROUBLESHOOTING	4-1
A.	TROUBLESHOOTING TABLE.....	4-1
B.	TROUBLESHOOTING FLOW CHART	4-5
1.	ELECTRICAL COMPONENTS GOOD; RAMP DOES NOT FUNCTION.....	4-18
C.	INSTALLATION NOTES	4-21
1.	MOUNTING BRACKET POSITIONING	4-21
2.	RAMP INSTALLATION.....	4-21
3.	HYDRAULIC LINE INSTALLATION	4-21
4.	WIRING HARNESS INSTALLATION	4-21
5.	HYDRAULIC SYSTEM PURGING	4-21
6.	RAMP HTDRAULIC PRESSURE ADJUSTMENT.....	4-22
7.	RAMP SPEED/TORQUE ADJUSTMENT	4-22
8.	SENSOR TARGET ADJUSTMENT.....	4-22
9.	FINAL INSPECTION.....	4-23
V.	SPARE PARTS	5-1
A.	RAMP DECALS.....	5-2

-This page intentionally left blank-