

This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.

Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.

Customer Name: _____

Installing Dealer: _____

Date Installed: _____

Serial Number: _____

REVISION RECORD

REV	PAGES	DESCRIPTION OF CHANGE	ECR / ECO
32DF9AS02. A	All	New release, in two-book format.	3776/4805
	2-9	Added anti-stow pressure switch.	NONE
	5-25	Changed reference 12 (#25436) quantity from 2 to 1.	3850/4836
	5-17	Added trunnion w/bushings 15761 and trunnion reinforcement kit 20185.	NA
	Inside cover	Updated disclaimer on inside cover.	4918
END OF LIST			

TABLE OF CONTENTS

<i>Chapter</i>	<i>Page</i>
I. INTRODUCTION	1-1
A. RICON FIVE-YEAR LIMITED WARRANTY	1-2
B. SHIPMENT INFORMATION	1-3
C. GENERAL SAFETY PRECAUTIONS	1-3
D. MAJOR LIFT COMPONENTS	1-4
II. INSTALLATION	2-1
A. MECHANICAL	2-1
1. LIFT LOCATION	2-1
2. LIFT MOUNTING	2-1
3. HYDRAULIC POWER UNIT	2-2
B. ELECTRICAL	2-3
1. SAFETY INTERLOCKS	2-4
C. FINAL ADJUSTMENTS	2-4
1. HYDRAULIC BLEEDING	2-4
2. PLATFORM VERTICAL TRAVEL LIMIT ADJUSTMENT	2-5
3. BRIDGEPLATE ADJUSTMENT	2-7
4. ANTI-STOW PRESSURE SWITCH ADJUSTMENT	2-8
D. VERIFY INSTALLATION	2-9
III. MAINTENANCE AND TROUBLESHOOTING	3-1
A. DAILY INSPECTIONS	3-1
B. MAINTENANCE SCHEDULE	3-2
C. POWER INDICATOR DIAGNOSTICS	3-3
D. ELECTRICAL WIRING DIAGRAMS	3-4
1. COLOR CODES	3-4
2. SYMBOLS	3-5
IV. REPAIR	4-1
A. GENERAL SAFETY PRECAUTIONS AND WARNINGS	4-1
B. LIFT SERVICE ACCESS	4-1
C. ROLLSTOP, PLATFORM AND FRAMES	4-2
1. ROLLSTOP MAINTENANCE	4-3
2. PLATFORM	4-6
3. BRIDGEPLATE LUBRICATION AND ADJUSTMENT	4-8
4. LIFTING FRAME	4-11
5. TRAVELING FRAME	4-12
D. DEPLOY SYSTEM	4-14
1. IN/OUT MOTOR AND GEARBOX	4-14
2. DRIVE CHAINS	4-16
3. DRIVE CHAIN INSTALLATION	4-17
4. DRIVE CHAIN ADJUSTMENT	4-18
5. TORQUE LIMIT CLUTCH REMOVAL	4-19
6. TORQUE LIMIT CLUTCH INSTALLATION	4-20
7. TORQUE LIMIT CLUTCH ADJUSTMENT	4-20
8. DRIVE SHAFT REMOVAL	4-21
9. DRIVE SHAFT INSTALLATION	4-22
10. PINION GEAR REMOVAL	4-23
11. PINION GEAR INSTALLATION	4-23

12. GEAR RACK REMOVAL AND INSTALLATION	4-23
E. HYDRAULIC SYSTEM.....	4-23
1. HYDRAULIC POWER UNIT FLUID FLUSH AND REMOVAL	4-24
2. HYDRAULIC PUMP MOTOR	4-24
3. HYDRAULIC CYLINDER.....	4-25
4. CARRIAGE HYDRAULIC HOSE REMOVAL	4-26
5. MAIN HYDRAULIC HOSE INSTALLATION.....	4-26
6. BLEEDING THE HYDRAULIC SYSTEM	4-27
F. ELECTRICAL CONTROL SYSTEM	4-28
1. LIFT MODE ENABLE CIRCUIT (OUT).....	4-28
2. AUTOMATIC STOW LEVEL CONTROL CIRCUIT DESCRIPTION	4-29
3. STOW LEVEL ALIGNMENT CHECK PROCEDURES	4-30
4. ADJUSTMENT OF THE AUTOMATIC STOW LEVEL ALIGNMENT SYSTEM.....	4-30
5. VERTICAL TRAVEL LIMIT CIRCUIT	4-32
6. LIMIT SWITCH REPLACEMENT	4-32
7. CARRIAGE CONTROL BOX.....	4-32
8. PUMP MOTOR CONTACTOR	4-33
V. PARTS DIAGRAMS AND LISTS	5-1
APPENDIX–LIFT SPECIFICATIONS	5-26