



Innovation in Mobility

ä
FoldOver
Low-Floor Vehicle
Access Ramp
for
Transit Buses

[TABLE OF CONTENTS](#)

[Print Entire Manual \(211K\)](#)

OPERATOR MANUAL

**SERVICING BY AN AUTHORIZED RICON SERVICE TECHNICIAN
IS REQUIRED DURING THE WARRANTY PERIOD.**

**RICON SERVICE TECHNICIANS MUST REFER TO THIS MANUAL
FOR OPERATING AND GENERAL MAINTENANCE
INSTRUCTIONS.**

REVISION RECORD

REVISION	PAGE(S)	DESCRIPTION OF CHANGE	ECR/ECO
32DFR105.A	ALL	Initial Release	N/A

TABLE OF CONTENTS

<i>Chapter</i>		<i>Page</i>
I.	FOLDOVER RAMP INTRODUCTION.....	1-1
A.	RICON PRODUCT SUPPORT.....	1-1
B.	RICON LIMITED WARRANTY	1-1
C.	SHIPPING INFORMATION.....	1-3
D.	GENERAL SAFETY PRECAUTIONS	1-3
II.	FOLDOVER RAMP DESCRIPTION.....	2-1
A.	RAMP FEATURES.....	2-1
1.	INTERLOCK SUPPORT.....	2-1
2.	AUDIBLE ALERT	2-1
3.	RAMP CONTROL PANEL.....	2-1
B.	RAMP CLEARANCE AND CAPACITY.....	2-2
C.	MAJOR COMPONENT DESCRIPTIONS.....	2-3
III.	FOLDOVER RAMP OPERATING INSTRUCTIONS.....	3-1
A.	SAFETY PRECAUTIONS.....	3-1
B.	DAILY INSPECTION.....	3-2
C.	RAMP OPERATION	3-2
1.	OPERATING RAMP WITH CONTROL PANEL.....	3-3
a.	Prepare Vehicle.....	3-3
b.	Deploy Ramp	3-3
c.	Stow Ramp	3-4
2.	OPERATING RAMP MANUALLY	3-4
a.	Prepare Vehicle.....	3-4
b.	Deploy Ramp	3-4
c.	Stow Ramp	3-5
IV.	FOLDOVER RAMP MAINTENANCE.....	4-1
A.	MAINTENANCE INFORMATION.....	4-1
B.	MAINTENANCE SCHEDULE	4-1
C.	RAMP DECALS.....	4-2

[BACK TO COVER](#)

[TO NEXT CHAPTER](#)