



*Innovation in Mobility*

***KlearVue  
K-Series  
Folding Platform  
Wheelchair Lift  
For  
Personal and Transit Use***

[TABLE OF CONTENTS](#)

[Print Entire Manual \(504K\)](#)

**OPERATOR MANUAL**



**THIS RICON PRODUCT MUST BE SERVICED BY AUTHORIZED  
RICON SERVICE TECHNICIANS.**

**PRODUCT USERS MUST REFER TO THIS MANUAL FOR  
OPERATING AND GENERAL MAINTENANCE INSTRUCTIONS.**

**RETAIN THIS MANUAL IN THE VEHICLE FOR FUTURE  
REFERENCE.**

Customer Name: \_\_\_\_\_

Installing Dealer: \_\_\_\_\_

Date Installed: \_\_\_\_\_

Serial Number: \_\_\_\_\_

**REVISION RECORD**

REVISION	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DSS101.B	All	New revision	3968/4900
	3-1	Added A. "Additional Maintenance Information" section.	N/A
	3-4	Added decal 22043 to decal location page.	3755/4792
	2-11	Deleted redundant steps in section c.	

**TABLE OF CONTENTS**

<i>Chapter</i>	<i>Page</i>
<b>I. INTRODUCTION</b> .....	<b>1-1</b>
A. RICON SERVICE SUPPORT .....	1-1
B. KLEARVUE LIFT WARRANTY .....	1-2
C. SHIPMENT INFORMATION.....	1-3
D. GENERAL SAFETY PRECAUTIONS.....	1-3
E. MAJOR COMPONENTS.....	1-4
<b>II. KLEARVUE OPERATING INSTRUCTIONS</b> .....	<b>2-1</b>
A. SAFETY PRECAUTIONS .....	2-1
B. DAILY SAFETY CHECK.....	2-3
C. LIFT FUNCTIONS .....	2-3
D. CONTROLS AND INDICATORS .....	2-4
▪ Control Pendant .....	2-4
▪ Interlock Indicator Light.....	2-5
▪ Circuit Breaker for Optional Door Operator.....	2-5
▪ Control System Circuit Breaker .....	2-5
▪ Main Circuit Breaker.....	2-6
▪ Manual Backup Pump .....	2-6
E. LIFT OPERATION.....	2-7
1. Entering Vehicle.....	2-8
2. Exiting Vehicle .....	2-8
3. Stowing Platform .....	2-9
4. Manual Operation .....	2-9
F. MAINTENANCE AND REPAIR NOTE .....	2-12
<b>III. MAINTENANCE AND REPAIR</b> .....	<b>3-1</b>
A. MAINTENANCE INFORMATION .....	3-1
B. CLEANING .....	3-1
C. LUBRICATION .....	3-1
D. MAINTENANCE SCHEDULE.....	3-2
E. KLEARVUE SERIES DECALS .....	3-4

**BACK TO COVER**

**TO NEXT CHAPTER**