



*Innovation in Mobility*

**UNI-lite<sup>®</sup>**  
**Personal Use**  
**Wheelchair Lift**

[Table Of Contents](#)

[Print Entire Manual \(2826KB\)](#)

**Service Manual**

09/23/02

32DULP02.B  
U.S. Patent Nos: 5,234,311;

© 1992-2001 RICON CORP.  
All Rights Reserved

Printed in the  
United States of America

**This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.**

**Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.**

Customer Name: \_\_\_\_\_  
Installing Dealer: \_\_\_\_\_  
Date Installed: \_\_\_\_\_  
Serial Number: \_\_\_\_\_

## REVISION RECORD

REV	PAGES	DESCRIPTION OF CHANGE	ECR / ECO
32DULP02. A	All	New release, in two-book format	3796/4809
32DULP02. B	Inside Cover	Updated disclaimer on inside cover.	3990/4918
<b>END OF LIST</b>			

## TABLE OF CONTENTS

---

<i>Chapter:</i>		<i>Page</i>
I.	INTRODUCTION .....	1-1
A.	RICON FIVE-YEAR LIMITED WARRANTY .....	1-1
B.	SHIPMENT INFORMATION.....	1-3
C.	GENERAL SAFETY PRECAUTIONS .....	1-3
D.	MAJOR LIFT COMPONENTS.....	1-4
II.	INSTALLATION .....	2-1
A.	REQUIRED TOOLS.....	2-1
B.	MECHANICAL INSTALLATION.....	2-2
1.	VEHICLE PREPARATION .....	2-2
2.	INSTALLATION KIT DESCRIPTION.....	2-2
3.	LIFT PREPARATION .....	2-3
4.	MAIN POST EXTENSION ADJUSTMENTS .....	2-4
5.	BASE PLATE ADJUSTMENT .....	2-9
6.	POSITION LIFT INTO VEHICLE .....	2-10
7.	BRIDGEPLATE ADJUSTMENT .....	2-14
8.	PLATFORM TILT ADJUSTMENT .....	2-15
9.	INSTALL LIFT IN VEHICLE .....	2-15
C.	ELECTRICAL INSTALLATION.....	2-16
D.	ELECTRICAL LIMIT SWITCH ADJUSTMENTS .....	2-17
E.	INSTALLATION VERIFICATION.....	2-19
F.	CUSTOMER ORIENTATION .....	2-19
III.	MAINTENANCE .....	3-1
A.	CLEANING AND LUBRICATION.....	3-1
B.	ELECTRICAL SYSTEM.....	3-1
C.	MAINTENANCE SCHEDULE .....	3-1
D.	TROUBLESHOOTING GUIDE .....	3-1
E.	TROUBLESHOOTING PROCEDURE .....	3-2
F.	CIRCUIT TRACE PROCEDURE .....	3-2
G.	ELECTRICAL WIRING DIAGRAM .....	3-3
1.	DIAGRAM LEGEND .....	3-3
2.	UNI-lite LIMIT SWITCH STATE DESCRIPTION.....	3-5
3.	WIRING DIAGRAMS .....	3-5
IV.	PARTS DIAGRAMS AND LISTS.....	4-1
APPENDIX.	LIFT SPECIFICATIONS.....	4-17