



Innovation in Mobility

Activan[®]
Accessibility With Style[®]

General Motors Minivan Conversion

SERVICE MANUAL

01/03/00

32DV0002.C

©1995-2000 RICON CORPORATION
All Rights Reserved

U.S and Foreign Patent(s) Pending
Printed in the United States of America

Authorized RICON dealers, only, may service this RICON ACT/VAN product.

This manual contains information about the RICON conversion of the General Motors minivan and its features. It supplements the original vehicle manufacturer Owner Manual.

Refer to the manufacturer Owner Manual for information and instructions regarding non-RICON features.

Customer Name: _____

Installing Dealer: _____

Date Installed: _____

Serial Number: _____

REVISION RECORD

REVISION	DATE	PAGE(S)	DESCRIPTION OF CHANGE	ECO
32DV0002.C	01/03/00	All	Released for Production	4435

TABLE OF CONTENTS

<u>Chapter</u>		<u>Page</u>
I.	INTRODUCTION.....	1-1
	GENERAL SAFETY PRECAUTIONS	1-2
	WARRANTY INFORMATION.....	1-2
II.	ACTIVAN FEATURES	2-1
	FOLDING RAMP	2-1
	REAR STORAGE BIN AND SPARE TIRE MOUNT	2-1
	Q'STRAIN® WHEELCHAIR AND OCCUPANT RESTRAINT SYSTEM.....	2-2
	REMOVABLE FRONT AND MIDDLE SEATS.....	2-2
	POWER OPERATED DOOR	2-2
	FOLD AWAY MIDDLE SEAT	2-2
	SIX-WAY POWER FRONT SEATBASE	2-3
	KNEELING REAR SUSPENSION.....	2-3
III.	OPERATING INSTRUCTIONS	3-1
	A. SAFETY PRECAUTIONS	3-1
	B. DAILY SAFETY PRECAUTIONS.....	3-1
	C. ACTIVAN CONTROLS	3-2
	1. POWER SLIDING DOOR AND POWER RAMP CONTROL SWITCHES.....	3-2
	2. ELECTRICAL CIRCUIT BREAKER AND FUSES	3-2
	3. KNEELING REAR SUSPENSION	3-2
	4. REMOTE CONTROL TRANSMITTER.....	3-3
	D. ACTIVAN OPERATION	3-4
	1. POWER SLIDING DOOR.....	3-4
	2. MANUAL FOLDING RAMP	3-4
	a. To Deploy Manual Folding Ramp	3-4
	b. To Stow Manual Folding Ramp	3-4
	c. To Swing Manual Folding Ramp Outward	3-5
	3. RIDE HEIGHT ADJUSTING REAR SUSPENSION.....	3-5
	4. POWER FOLDING RAMP.....	3-5
	a. To Deploy Power Ramp.....	3-6
	b. To Deploy Power Ramp Without Kneeling Vehicle	3-6
	c. To Deploy Power Ramp when Sliding Door is already Open.....	3-6
	d. To Stow Power Ramp.....	3-6
	e. To Stow Ramp Only (Leaving door open)	3-6
	f. To Swing Power Folding Ramp Outward.....	3-6
	5. SIX-WAY POWER SEAT BASE.....	3-6
	6. REMOVABLE FRONT AND MIDDLE SEATS	3-7
	a. To Remove Front Seat	3-7
	b. To Install Front Seat	3-7

<u>Chapter</u>		<u>Page</u>
7.	FOLDAWAY MIDDLE SEAT	3-8
a.	To Fold and Secure Middle Seat.....	3-8
b.	To Unfold Middle Seat.....	3-6
IV.	MAINTENANCE.....	4-1
A.	FLOOR PANEL CUTTING PRECAUTION	4-1
B.	MAINTENANCE SCHEDULE	4-2
C.	PRODUCT DESCRIPTION	4-3
1.	PROGRAMMABLE CONTROLLER	4-3
2.	CONTROLLER MODULE	4-4
D.	ELECTRICAL DIAGRAM.....	4-5
E.	RICON INSTALLED CIRCUIT BREAKERS AND FUSES	4-8
F.	RICON MODIFICATIONS TO OEM SYSTEMS.....	4-11
1.	BYPASS OF OEM SIDE AIRBAGS	4-11
2.	MODIFICATION OF OEM AUTOMATIC LEVELING SYSTEM.....	4-11
3.	PROGRAMMABLE CONTROLLER SLEEP MODE PRECAUTION	4-11
4.	RESETTING THE OEM POWER SLIDING DOOR.....	4-11
G.	DIAGNOSTIC GUIDE	4-12
V.	MAJOR SYSTEM REPAIR.....	5-1
A.	GENERAL SAFETY PRECAUTIONS AND WARNINGS	5-1
B.	PROGRAMMABLE CONTROLLER REMOVAL	5-2
C.	PROGRAMMABLE CONTROLLER INSTALLATION	5-4
D.	BYPASS PLUG INSTALLATION	5-4
E.	"DOOR FULLY OPEN" SWITCH REPLACEMENT	5-5
F.	DIAGNOSTIC FLOW CHART	5-6
VI.	ACTIVAN SPARE PARTS.....	6-1

LIST OF FIGURES

<i>Chapter-figure</i>	<i>Page</i>
2-1 FOLDING RAMP STOWED	2-1
2-2 FOLDING RAMP DEPLOYED	2-2
2-3 FOLDING RAMP SWUNG OUT.....	2-1
2-4 STORAGE BIN/SPARE TIRE MOUNT	2-1
2-5 Q'STRAIN T ANCHOR POINTS.....	2-2
2-6 REMOVABLE FRONT SEAT	2-2
2-7 FRONT SEAT LOCKED.....	2-2
2-8 FOLDAWAY MIDDLE SEAT.....	2-2
2-9 MIDDLE SEAT UP	2-2
2-10 SIX-WAY POWER SEAT BASE	2-3
2-11 ACT/VAN KNEELING	2-3
3-1 OVERHEAD CONSOLE.....	3-1
3-2 PASSENGER WINDOW PILLAR	3-1
3-3 CIRCUIT BREAKER	3-1
3-4 ACT/VAN FUSES.....	3-1
3-5 TRANSMITTER.....	3-3
3-6 RELEASE HANDLE	3-5
3-7 SIX-WAY POWER SEATBASE	3-6
3-8 POWER SEATBASE CONTROL BOX.....	3-6
3-9 HANDLE LOCKED.....	3-7
3-10 HANDLE UNLOCKED.....	3-7
3-11 FOLD SEAT BACK	3-8
3-12 RELEASE LEVER.....	3-8
3-13 SEAT LOCK AND SEAT RELEASE.....	3-8
4-1 FLOOR PRECAUTION	4-1
4-2 CONTROLLER TOP VIEW	4-3
4-3 CONTROLLER MODULE TOP VIEW.....	4-4
4-4 CONTROLLER AND MAIN HARNESS WIRING DIAGRAM.....	4-7
4-5 MAIN CIRCUIT BREAKER.....	4-8
4-6 RICON INSTALLED FUSE BLOCK	4-9
4-7 RICON FUSE BLOCK LAYOUT.....	4-9
4-8 PROGRAMMABLE CONTROLLER FUSE.....	4-10
5-1 RICON FUSE BLOCK	4-1
5-2 JACK ACCESS COVER	4-3
5-3 MAIN HARNESS CONNECTOR.....	4-4
5-4 CONTROLLER MOUNTING	4-7
5-5 RICON FUSE BLOCK	4-8
5-6 31-PIN CONNECTOR AND BYPASS PLUG	4-9
6-1 INTERIOR DECALS.....	6-2
6-2 EXTERIOR DECALS.....	6-3
6-3 MAJOR ELECTRICAL COMPONENTS	6-4
6-4 FIXED FRONT SEATBASE	6-5

<u>Chapter</u>		<u>Page</u>
6-5	REMOVABLE FRONT SEATBASE	6-6
6-6	OPTIONAL SIX-WAY POWER SEATBASE	6-7
6-7	MANUAL FOLDING RAMP ASSEMBLY	6-8
6-8	POWER FOLDING RAMP	6-9
6-9	RAMP VERTICAL MOUNT BRACKET ASSEMBLY	6-10
6-10	RAMP ROLLER ASSEMBLY	6-10
6-11	SPARE TIRE MOUNT AND STORAGE BIN	6-11
6-12	REMOVABLE MIDDLE SEATBASE	6-12
6-13	DRIVER AND PASSENGER FOOTREST	6-13
6-14	REAR FOOTRESTS	6-13
6-15	CARGO AREA COMPONENTS	6-13
6-16	SIX-PIECE FLARE KIT	6-13

LIST OF TABLES

4-1	MAINTENANCE SCHEDULE.....	4-2
4-2	CONTROLLER MODULE INDICATORS	4-4
4-3	CONTROLLER CONNECTOR PIN FUNCTIONS.....	4-5
4-4	WIRE COLOR CODES	4-6
4-5	FUSE BLOCK FUSES	4-9
4-6	PROGRAMMABLE CONTROLLER FUSE.....	4-10
4-7	DIAGNOSTIC GUIDE	4-12

LIST OF CHARTS

5-1	DIAGNOSTIC FLOW CHART	5-6
-----	-----------------------------	-----