



*Innovation in Mobility*

**PSL-10  
STEP ELEVATOR  
and  
WHEELCHAIR LIFT**

[Table Of Contents](#)

[Print Entire Manual \(1403KB\)](#)

**SERVICE MANUAL**

**This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.**

**Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.**

Customer Name: \_\_\_\_\_  
Installing Dealer: \_\_\_\_\_  
Date Installed: \_\_\_\_\_  
Serial Number: \_\_\_\_\_

## REVISION RECORD

REVISION	DATE	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DSL102. B	07/02/01	All	Changed to curved arms on iso's throughout manual. Changed "dealer" to "service technician".	3740/4773
		1-3	Changed "dealer" to "shipment".	
		2-1 & 2-5	Added "UNLOCK" function and icon to pendant.	
		2-2 & 2-3	Updated drawings, deleted item 3, added "stow lock release cable".	
		2-5	Rewrote "stow-lock release" references to current configuration, and updated corresponding figures.	
		Ch. 3	Deleted "Operating Instructions" chapter.	
		4-6	Updated installation wiring diagram.	
		5-3	Updated "Lift Diagnostic" flow chart.	
		Ch. 6	Updated Spare parts chapter in accordance with redlines.	
32DSL102. C	09/23/02	Inside Cover	Updated disclaimer on inside cover.	3990/4918

# TABLE OF CONTENTS

<u>Chapter</u>	<u>Page</u>
<b>I. PSL-10 INTRODUCTION</b> .....	<b>1-1</b>
A. RICON SERVICE SUPPORT .....	1-1
B. WARRANTY INFORMATION .....	1-1
C. SHIPMENT INFORMATION .....	1-3
D. GENERAL SAFETY PRECAUTIONS .....	1-3
<b>II. PSL-10 DESCRIPTION</b> .....	<b>2-1</b>
A. STEP-LIFT FUNCTIONS AND POSITIONS .....	2-1
B. MAJOR STEP-LIFT COMPONENTS .....	2-2
C. CONTROLS .....	2-5
1. CONTROL PENDANT .....	2-5
2. EMERGENCY OVERRIDE SWITCH .....	2-5
3. MANUAL STOW-LOCK RELEASE CABLE .....	2-5
4. MIDDLE PLATFORM SECTION RELEASE HANDLE .....	2-6
5. FRONT PLATFORM SECTION HANDLE AND ROLLSTOP HANDLE .....	2-6
6. MANUAL BACK-UP PUMP .....	2-6
<b>III. PSL-10 MAINTENANCE</b> .....	<b>3-1</b>
A. MAINTENANCE SCHEDULE .....	3-1
B. COMPONENT DESCRIPTION .....	3-3
1. INTERLOCK MODULE .....	3-3
2. PLATFORM OVERRIDE SWITCH .....	3-3
C. ELECTRICAL DIAGRAM .....	3-4
1. WIRING DIAGRAM COLOR CODES .....	3-4
2. ELECTRICAL WIRING DIAGRAM .....	3-5
D. DIAGNOSTIC GUIDE .....	3-6
<b>IV. PSL-10 MAJOR SYSTEMS REPAIR</b> .....	<b>4-1</b>
A. GENERAL SAFETY PRECAUTIONS .....	4-1
B. DIAGNOSTIC FLOW CHART .....	4-3
<b>V. PSL-10 SPARE PARTS</b> .....	<b>5-1</b>
APPENDIX 1 .....	5-13

## LIST OF FIGURES

<u>Chapter</u>	<u>Page</u>
2-1. CONTROL PENDANT .....	2-1
2-2. STEP/PLATFORM POSITIONS .....	2-1
2-3. STEP ELEVATOR COMPONENTS.....	2-2
2-4. WHEELCHAIR LIFT COMPONENTS.....	2-3
2-5. CONTROL PENDANT .....	2-5
2-6. LEFT HAND TOWER WITH EMERGENCY OVERRIDE SWITCH.....	2-5
2-7. MANUAL STOW-LOCK RELEASE CABLE LOCATION .....	2-5
2-8. RELEASE HANDLE .....	2-6
2-9. PLATFORM AND ROLLSTOP HANDLES.....	2-6
2-10. MANUAL BACKUP PUMP .....	2-6
3-1. INTERLOCK MODULE .....	3-3
3-2. OVERRIDE SWITCH.....	3-3
3-3. PSL-10 INSTALLATION WIRING DIAGRAM .....	3-6
5-1. FINAL ASSEMBLY.....	5-2
5-2. PLATFORM ASSEMBLY, TOP VIEW .....	5-4
5-3. PLATFORM ASSEMBLY, BOTTOM VIEW .....	5-5
5-4. BASE FRAME AND LIFTING SADDLE ASSEMBLY.....	5-8
5-5. STOW LOCK ASSEMBLY .....	5-9
5-6. REAR PLATFORM SECTION ASSEMBLY, BOTTOM VIEW .....	5-10

## LIST OF TABLES

<u>Chapter</u>	<u>Page</u>
2-1. STEP-LIFT FUNCTIONS .....	2-1
2-2. MAJOR STEP-LIFT COMPONENTS.....	2-4
3-1. DAILY SAFETY CHECK .....	3-1
3-2. MAINTENANCE SCHEDULE .....	3-2
3-3. INTERLOCK MODULE J1 WIRE FUNCTIONS - MAIN POWER HARNESS .....	3-4
3-4. INTERLOCK MODULE J2 WIRE FUNCTIONS - DOOR OPEN WARNING LIGHT .....	3-4
3-5. INTERLOCK MODULE J3 WIRE FUNCTIONS - INTERLOCK HARNESS .....	3-4
3-6. WIRE COLOR CODES.....	3-4
3-7. DIAGNOSTIC GUIDE .....	3-6
4-1. DIAGNOSTIC FLOW CHART.....	4-3

[Go to next chapter-](#)