



INNOVATION IN MOBILITY™

**RD03000 Series
Internal Power
Swing Door Operator
with
Auto Unlatch**

[**TABLE OF CONTENTS**](#)

[**Print Entire Manual \(425K\)**](#)

Operator Manual

This RICON product must be installed and serviced by authorized RICON service technicians.

The operator must refer to this manual for operating instructions, then retain it for future reference.

Customer Name: _____
Installing Dealer: _____
Date Installed: _____
Serial Number: _____

REVISION RECORD

REV	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DD0301. A	All	New release.	
END OF LIST			

TABLE OF CONTENTS

<i>Chapter:</i>	<i>Page</i>
I. INTRODUCTION	1-1
A. RICON ONE-YEAR LIMITED WARRANTY	1-1
B. SHIPMENT INFORMATION	1-3
C. GENERAL SAFETY PRECAUTIONS	1-3
D. PRODUCT TERMINOLOGY	1-4
II. OPERATING INSTRUCTIONS	2-1
A. SAFETY PRECAUTIONS	2-1
B. DAILY SAFETY CHECK	2-2
C. CONTROLS AND INDICATORS	2-2
1. LIFT OR RAMP CONTROL PENDANT	2-2
2. CIRCUIT BREAKER LOCATIONS	2-3
D. POWER DOOR OPERATION	2-5
1. TO ENTER VEHICLE	2-5
2. TO EXIT VEHICLE	2-6
3. MANUAL OPERATION	2-6
III. MAINTENANCE	3-1
A. MAINTENANCE INFORMATION	3-1
B. MAINTENANCE SCHEDULE	3-1
C. TROUBLESHOOTING GUIDE	3-2
D. DOOR OPERATOR DECALS	3-3

-BACK TO FRONT COVER-

-GO TO NEXT CHAPTER-