



Innovation in Mobility

**Mirage™
F9B Series
Personal Use
Wheelchair Lift**

[PRINT ENTIRE MANUAL](#)

[TABLE OF CONTENTS](#)

Service Manual

This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.

Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.

Customer Name: _____

Installing Dealer: _____

Date Installed: _____

Serial Number: _____

REVISION RECORD

REV	PAGES	DESCRIPTION OF CHANGE	ECR / ECO
32DF9BP02. A	ALL	New release in two-book format.	3802/4820
32DF9BP02. B	Inside Cover	Updated disclaimer on inside cover.	3990/4918
END OF LIST			

TABLE OF CONTENTS

Chapter	Page
I. INTRODUCTION.....	1-1
A. RICON ONE-YEAR LIMITED WARRANTY.....	1-1
B. SHIPMENT INFORMATION.....	1-3
C. GENERAL SAFETY PRECAUTIONS.....	1-3
D. MAJOR LIFT COMPONENTS.....	1-4
II. INSTALLATION.....	2-1
A. MECHANICAL INSTALLATION.....	2-1
1. LIFT LOCATION.....	2-1
2. LIFT MOUNTING.....	2-1
3. AUXILIARY EQUIPMENT MOUNTING.....	2-2
B. ELECTRICAL.....	2-2
1. INSTALL MAIN CIRCUIT BREAKER.....	2-2
2. ROUTE MAIN POWER CABLE.....	2-3
3. ROUTE GROUNDING STRAP.....	2-3
4. CONNECT MAIN CIRCUIT BREAKER TO BATTERY.....	2-3
5. SAFETY INTERLOCKS.....	2-3
C. FINAL ADJUSTMENTS.....	2-4
1. PLATFORM TRAVEL LIMIT ADJUSTMENT.....	2-4
2. SET THE VERTICAL TRAVEL LIMIT SWITCH.....	2-4
3. THRESHOLD GAP SETTING.....	2-5
4. BRIDGEPLATE ADJUSTMENT.....	2-5
D. VERIFY INSTALLATION.....	2-5
E. CUSTOMER ORIENTATION.....	2-6
III. MAINTENANCE.....	3-1
A. MAINTENANCE SCHEDULE.....	3-1
B. TROUBLESHOOTING.....	3-3
1. INTERLOCK INDICATOR DIAGNOSTICS.....	3-3
2. LIFT OPERATIONAL TROUBLESHOOTING.....	3-4
3. LIFT MAINTENANCE TROUBLESHOOTING.....	3-5
C. ELECTRICAL WIRING DIAGRAMS.....	3-8
1. DIAGRAM LEGEND.....	3-8
2. LIMIT SWITCH STATE DESCRIPTION.....	3-11
3. WIRING DIAGRAM.....	3-12
IV. REPAIR.....	4-1
A. LIFT SERVICE ACCESS.....	4-1
B. TRAVELING FRAME.....	4-1
1. REMOVAL OF TRAVELING FRAME.....	4-1
2. TRAVELING FRAME INSTALLATION.....	4-2
C. PLATFORM.....	4-2
1. PLATFORM REMOVAL.....	4-2
2. PLATFORM INSTALLATION.....	4-3
D. BRIDGEPLATE MAINTENANCE AND ADJUSTMENT.....	4-3
1. BRIDGEPLATE LUBRICATION.....	4-3
2. BRIDGEPLATE ADJUSTMENT.....	4-3
E. ROLLSTOP LUBRICATION.....	4-3

F.	LIFTING FRAME	4-4
1.	LIFTING FRAME REMOVAL	4-4
2.	LIFTING FRAME INSTALLATION	4-5
G.	DEPLOYMENT SYSTEM REFERENCE DIAGRAMS	4-6
H.	DEPLOYMENT SYSTEM STOW/DEPLOY MOTOR	4-7
1.	STOW/DEPLOY MOTOR REMOVAL.....	4-7
2.	STOW/DEPLOY MOTOR INSTALLATION.....	4-8
I.	GEAR BOX	4-8
J.	DRIVE CHAINS	4-8
1.	DRIVE CHAIN REMOVAL	4-8
2.	DRIVE CHAIN INSTALLATION	4-9
3.	DRIVE CHAIN ADJUSTMENT.....	4-9
K.	DEPLOYMENT SYSTEM TORQUE LIMIT CLUTCH	4-10
1.	TORQUE LIMIT CLUTCH REMOVAL	4-10
2.	TORQUE LIMIT CLUTCH INSTALLATION	4-10
3.	TORQUE LIMIT CLUTCH ADJUSTMENT.....	4-10
L.	DEPLOYMENT SYSTEM DRIVE SHAFTS	4-11
1.	DRIVE SHAFT REMOVAL.....	4-11
2.	DRIVE SHAFT INSTALLATION.....	4-12
M.	DEPLOYMENT SYSTEM GEAR RACK AND PINION	4-12
1.	GEAR REMOVAL	4-12
2.	GEAR INSTALLATION	4-12
N.	HYDRAULIC SYSTEM	4-13
1.	HYDRAULIC POWER UNIT (SYSTEM FLUSH AND FLUID RENEWAL)	4-13
2.	HYDRAULIC PUMP MOTOR.....	4-13
3.	HYDRAULIC CYLINDER	4-14
4.	HYDRAULIC HOSES.....	4-16
5.	BLEEDING OF HYDRAULIC SYSTEM	4-17
O.	ELECTRICAL CONTROL SYSTEM	4-17
1.	LIFT MODE ENABLE CIRCUIT (OUT SWITCH).....	4-17
2.	AUTOMATIC STOW LEVEL CONTROL CIRCUIT DESCRIPTION.....	4-18
3.	STOW LEVEL ALIGNMENT CHECK PROCEDURES.....	4-18
4.	ADJUSTMENT OF THE AUTOMATIC STOW LEVEL ALIGNMENT SYSTEM	4-19
5.	VERTICAL TRAVEL LIMIT CIRCUIT.....	4-19
6.	LIMIT SWITCH REPLACEMENT.....	4-20
7.	PUMP MOTOR CONTRACTOR.....	4-20
8.	CIRCUIT PROTECTION DEVICES	4-20
V.	PARTS DIAGRAMS AND LISTS	5-1
	APPENDIX 1: LIFT SPECIFICATIONS.....	4-24