



*Innovation in Mobility*

**FR2000 SERIES  
FOLD OVER RAMP  
Low-Floor Vehicle  
Access Ramp  
for  
NEOPLAN**

**PRINT ENTIRE MANUAL**

**TABLE OF CONTENTS**

**OPERATOR MANUAL**

12/03/01

32DFR101.B

© 95-2001 RICON CORPORATION  
All Rights Reserved

U.S and Foreign Patents Pending  
Printed in the United States of America



**THIS RICON PRODUCT MUST BE SERVICED BY  
AUTHORIZED RICON SERVICE TECHNICIANS.**

**PRODUCT USERS MUST REFER TO THIS  
MANUAL FOR OPERATING AND GENERAL  
MAINTENANCE INSTRUCTIONS.**

**RETAIN THIS MANUAL IN THE VEHICLE FOR  
FUTURE REFERENCE.**

Customer Name: \_\_\_\_\_

Installing Dealer: \_\_\_\_\_

Date Installed: \_\_\_\_\_

Serial Number: \_\_\_\_\_

**REVISION RECORD**

REVISION	PAGES	DESCRIPTION OF CHANGE	ECR/ECO
32DFR101. A	All	New release.	3860/4839
32DFR101. B	All		

## TABLE OF CONTENTS

<u>Chapter</u>	<u>Page</u>
<b>I. INTRODUCTION</b> .....	1-1
RICON ONE-YEAR LIMITED WARRANTY .....	1-2
<b>II. DESCRIPTION</b> .....	2-1
A. RAMP FEATURES .....	2-1
B. RAMP LOAD CLEARANCE AND CAPACITY .....	2-2
C. MAJOR COMPONENTS .....	2-2
D. RAMP DECALS .....	2-4
<b>III. OPERATING INSTRUCTIONS</b> .....	3-1
A. SAFETY PRECAUTIONS.....	3-1
B. DAILY INSPECTION .....	3-2
C. RAMP OPERATION .....	3-3
<b>IV. MAINTENANCE INSTRUCTIONS</b> .....	4-1
A. MAINTENANCE INFORMATION .....	4-1
B. MAINTENANCE SCHEDULE .....	4-1

**-BACK TO COVER-**

**-GO TO NEXT CHAPTER-**