




*INNOVATION IN MOBILITY*

***FoldOver*** <sup>ä</sup>  
**BR2SS Series**  
**Low-Floor Vehicle Access Ramp**  
**for**  
**Transit Buses**

[PRINT ENTIRE MANUAL](#)

[TABLE OF CONTENTS](#)

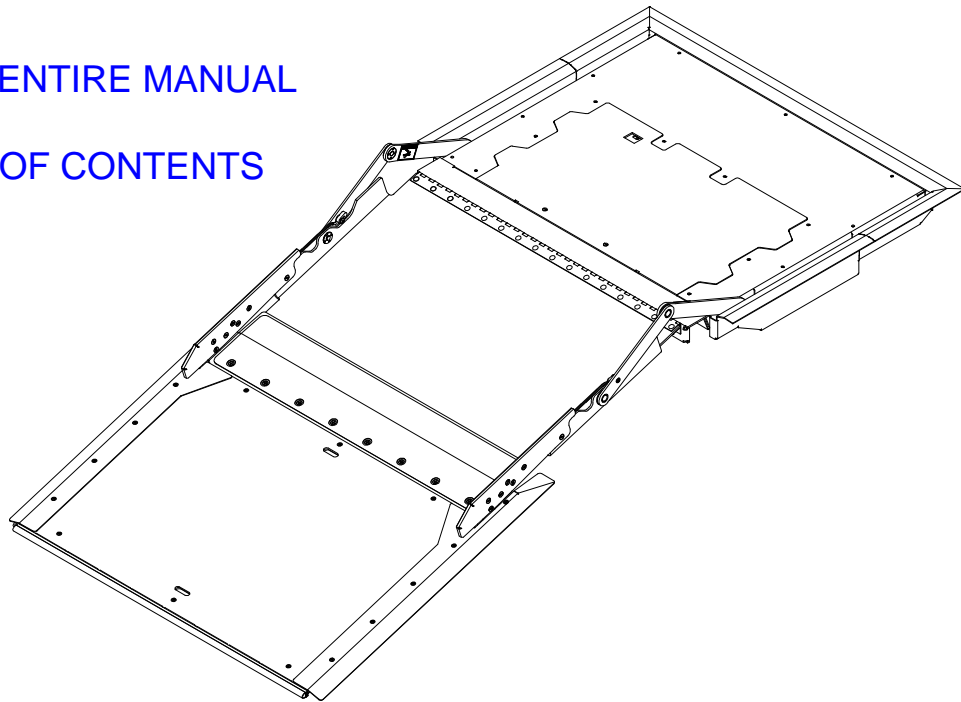

**SERVICE MANUAL**

**This Ricon service manual is for use by qualified service technicians, and is not intended for use by non-professionals (do-it-yourselfers). The manual provides essential instructions and reference information, which supports qualified technicians in the correct installation and maintenance of Ricon products.**

**Qualified service technicians have the training and knowledge to perform maintenance work properly and safely. For the location of a Ricon authorized service technician in your area, call Ricon Product Support at 1-800-322-2884.**

Customer Name: \_\_\_\_\_

Installing Dealer: \_\_\_\_\_

Date Installed: \_\_\_\_\_

Serial Number: \_\_\_\_\_

## Revision Record

| REV            | DATE     | PAGES | DESCRIPTION OF CHANGE | ECR/ECO |
|----------------|----------|-------|-----------------------|---------|
| 32DFR114.<br>A | 02/02/04 | All   | New release.          |         |
|                |          |       |                       |         |

## TABLE OF CONTENTS

| <u>Chapter</u>                                                                     | <u>Page</u> |
|------------------------------------------------------------------------------------|-------------|
| <b>I. FOLDOVER RAMP INTRODUCTION.....</b>                                          | <b>1-1</b>  |
| <b>A. RICON PRODUCT SUPPORT .....</b>                                              | <b>1-1</b>  |
| <b>B. RICON TWO-YEAR LIMITED WARRANTY.....</b>                                     | <b>1-1</b>  |
| <b>C. SHIPPING INFORMATION.....</b>                                                | <b>1-2</b>  |
| <b>II. FOLDOVER RAMP DESCRIPTION.....</b>                                          | <b>2-1</b>  |
| <b>A. RAMP FEATURES.....</b>                                                       | <b>2-1</b>  |
| 1. INTERLOCK SUPPORT .....                                                         | 2-1         |
| 2. AUDIBLE ALERT .....                                                             | 2-1         |
| 3. RAMP CONTROL PANEL .....                                                        | 2-1         |
| 4. HEATER MAT (OPTIONAL) .....                                                     | 2-2         |
| <b>B. RAMP CAPACITY AND SIZE.....</b>                                              | <b>2-2</b>  |
| <b>C. MAJOR RAMP COMPONENTS.....</b>                                               | <b>2-3</b>  |
| <b>D. RAMP SPECIFICATIONS.....</b>                                                 | <b>2-5</b>  |
| <b>III. FOLDOVER RAMP MAINTENANCE.....</b>                                         | <b>3-1</b>  |
| <b>A. GENERAL SAFETY PRECAUTIONS .....</b>                                         | <b>3-1</b>  |
| <b>B. DAILY INSPECTION.....</b>                                                    | <b>3-2</b>  |
| <b>C. MAINTENANCE SCHEDULE .....</b>                                               | <b>3-2</b>  |
| <b>D. RAMP COMPONENT INFORMATION .....</b>                                         | <b>3-3</b>  |
| 1. HYDRAULIC PUMP .....                                                            | 3-3         |
| 2. FLOW CONTROL VALVES.....                                                        | 3-3         |
| 3. DEPLOY AND STOW PRESSURE SETTING VALVES.....                                    | 3-3         |
| 4. ELECTRONIC CONTROLLER .....                                                     | 3-3         |
| 5. CIRCUIT BREAKERS AND FUSES .....                                                | 3-5         |
| 6. CONTACT SENSITIVE EDGE ON FRONT OF RAMP.....                                    | 3-5         |
| 7. RAMP ARM ASSEMBLY .....                                                         | 3-6         |
| <b>E. ELECTRICAL AND HYDRAULIC DIAGRAMS .....</b>                                  | <b>3-7</b>  |
| <b>IV. FOLDOVER RAMP TROUBLESHOOTING.....</b>                                      | <b>4-1</b>  |
| <b>A. TROUBLESHOOTING TABLE.....</b>                                               | <b>4-1</b>  |
| <b>B. INSTALLATION GUIDELINE.....</b>                                              | <b>4-6</b>  |
| 1. LOCATING MOUNTING BRACKETS ON BUS FRAME.....                                    | 4-6         |
| 2. INSTALLING RAMP IN FLOOR .....                                                  | 4-6         |
| 3. INSTALLING VEHICLE WIRING HARNESS.....                                          | 4-6         |
| 4. ADJUSTING PRESSURE IN RAMP HYDRAULIC SYSTEM .....                               | 4-6         |
| 5. ADJUSTING THE DEPLOY AND STOW PRESSURE SETTINGS.....                            | 4-7         |
| 6. FLOW CONTROL VALVE ADJUSTMENT .....                                             | 4-8         |
| 7. ADJUSTING SENSOR TARGET FOR POSITION AND GAP.....                               | 4-9         |
| 8. FINAL INSPECTION .....                                                          | 4-10        |
| <b>V. FOLDOVER RAMP SPARE PARTS.....</b>                                           | <b>5-1</b>  |
| <b>FIGURE 5-1: RAMP DECAL PART NUMBERS AND LOCATIONS .....</b>                     | <b>5-2</b>  |
| <b>FIGURE 5-2: RAMP AND TOP SUPPORT ASSEMBLY (SHEET-1).....</b>                    | <b>5-4</b>  |
| <b>FIGURE 5-3: RAMP AND TOP SUPPORT ASSEMBLY (SHEET-2).....</b>                    | <b>5-5</b>  |
| <b>FIGURE 5-4: ENCLOSURE ASSEMBLY W/ELECTRICAL &amp; HYDRAULIC COMPONENTS.....</b> | <b>5-8</b>  |
| <b>FIGURE 5-5: ROTARY ACTUATOR ASSEMBLY .....</b>                                  | <b>5-10</b> |

This page intentionally left blank.