



**INNOVATION IN MOBILITY™**

***PF4000 Series™  
Low-Floor Vehicle  
Access Ramp  
for  
Custom Installation***

[\*\*PRINT ENTIRE MANUAL \(860KB\)\*\*](#)

[\*\*TABLE OF CONTENTS\*\*](#)

**Service Manual**

**This RICON product must be installed and serviced by authorized RICON service technicians.**

**The authorized RICON service technician must refer to this manual for installation instructions.**

**The owner must refer to this manual for operating instructions, then retain it for future reference by authorized RICON service technicians who perform service and repairs.**

Customer Name:	_____
Installing Dealer:	_____
Date Installed:	_____
Serial Number:	_____

## REVISION RECORD

REV	PAGES	DESCRIPTION OF CHANGE	ECR / ECO
32DPF402. A	All	New release, in two-book format	3842/4829
<b>END OF LIST</b>			

# TABLE OF CONTENTS

<i>Chapter:</i>	<i>Page</i>
<b>I. INTRODUCTION</b> .....	<b>1-1</b>
A. RICON 1-YEAR LIMITED WARRANTY .....	1-1
B. SHIPMENT INFORMATION .....	1-3
C. GENERAL SAFETY PRECAUTIONS .....	1-3
D. PRODUCT TERMINOLOGY .....	1-4
<b>II. INSTALLATION</b> .....	<b>2-1</b>
A. MECHANICAL .....	2-1
1. RAMP LOCATION .....	2-1
2. RAMP MOUNTING .....	2-1
B. ELECTRICAL INSTALLATION .....	2-2
C. RAMP CONTROLLER ADJUSTMENT .....	2-3
1. DEPLOY ADJUSTMENT .....	2-3
2. STOW ADJUSTMENT .....	2-4
D. INSTALLATION VERIFICATION .....	2-4
E. CUSTOMER ORIENTATION .....	2-5
<b>III. MAINTENANCE</b> .....	<b>3-1</b>
A. MAINTENANCE SCHEDULE .....	3-1
B. RAMP CONTROLLER ADJUSTMENT .....	3-2
C. RAMP CONTROLLER ELECTRICAL WIRING .....	3-2
1. DIAGRAM LEGEND .....	3-2
2. ELECTRICAL SIGNAL DESCRIPTION .....	3-2
3. WIRING DIAGRAM .....	3-3
<b>IV. PARTS DIAGRAMS AND LISTS</b> .....	<b>4-1</b>