



**INSTALLATION INSTRUCTIONS
IRS CAM SPACER, REPLACEMENT
S-SERIES (S/N'S 3200+) KIT# 01224**

- Read and understand supplemental instructions completely before installation is attempted. Refer to the Service/Owner Manual for additional installation instructions and safety precautions.
- Check contents of kit. Immediately notify Ricon of any missing parts. Claims for damages that have occurred during shipment must be made to the shipper.

TABLE OF CONTENTS	PAGE
I. TOOLS REQUIRED	1
II. INTRODUCTION	1
III. DISASSEMBLY PROCEDURE	1
IV. ASSEMBLY PROCEDURE	1

I. TOOLS REQUIRED

Snap Ring Pliers

II. INTRODUCTION

The following instructions outline the replacement of rubber spacers in vertical arms of all S-Series lifts.

III. DISASSEMBLY PROCEDURE

- A. Refer to **Figure [1]**. Remove snap-ring (**item 1**) from both vertical arms (left and right).
- B. Tap out pin (**item 2**).
- C. Remove both plastic spacers (**items 3**).

IV. ASSEMBLY PROCEDURE

- A. Insert pin (**item 2**) through the supplied rubber spacers (**items 3**) and into the vertical arms.
- B. Replace snap ring (**item 1**) to secure pin (**item 2**)

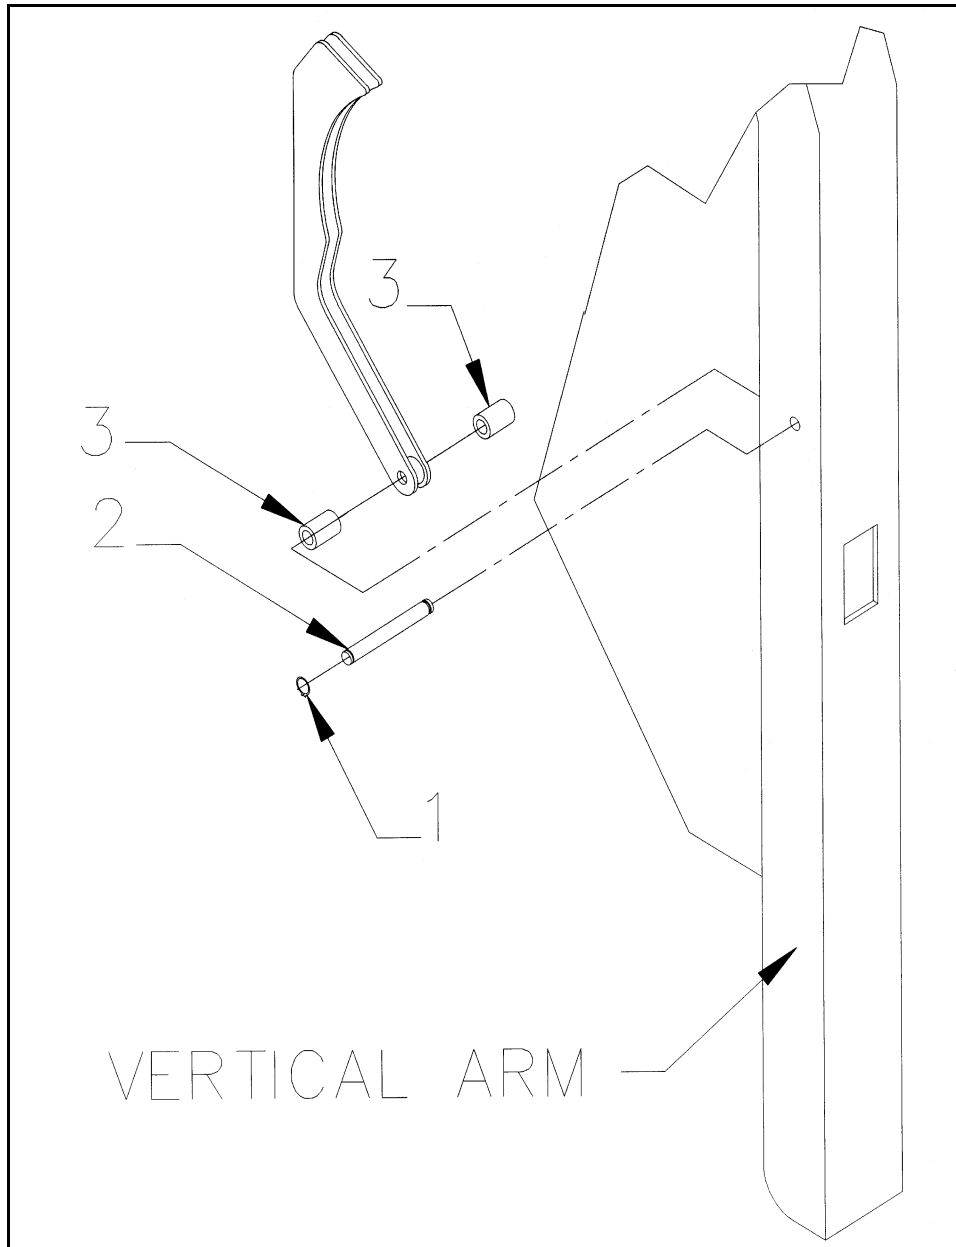


FIGURE: [1]