




INSTALLATION INSTRUCTIONS
INSTALLATION KITS # 13054, 13055, 16092 AND 19410
KIT, RESTRAINT BELT, TRANSIT AND ADA APP'S, S-SERIES

- Be certain that these supplemental instructions are read and understood completely before installation is attempted. You should also refer to the Service/Owner Manual for additional installation instructions and safety precautions.
- Check contents of this documentation package and notify Ricon immediately of any missing items. Claims for damages that have occurred during shipping must be made to the shipper.

I. RESTRAINT BELT INSTALLATION

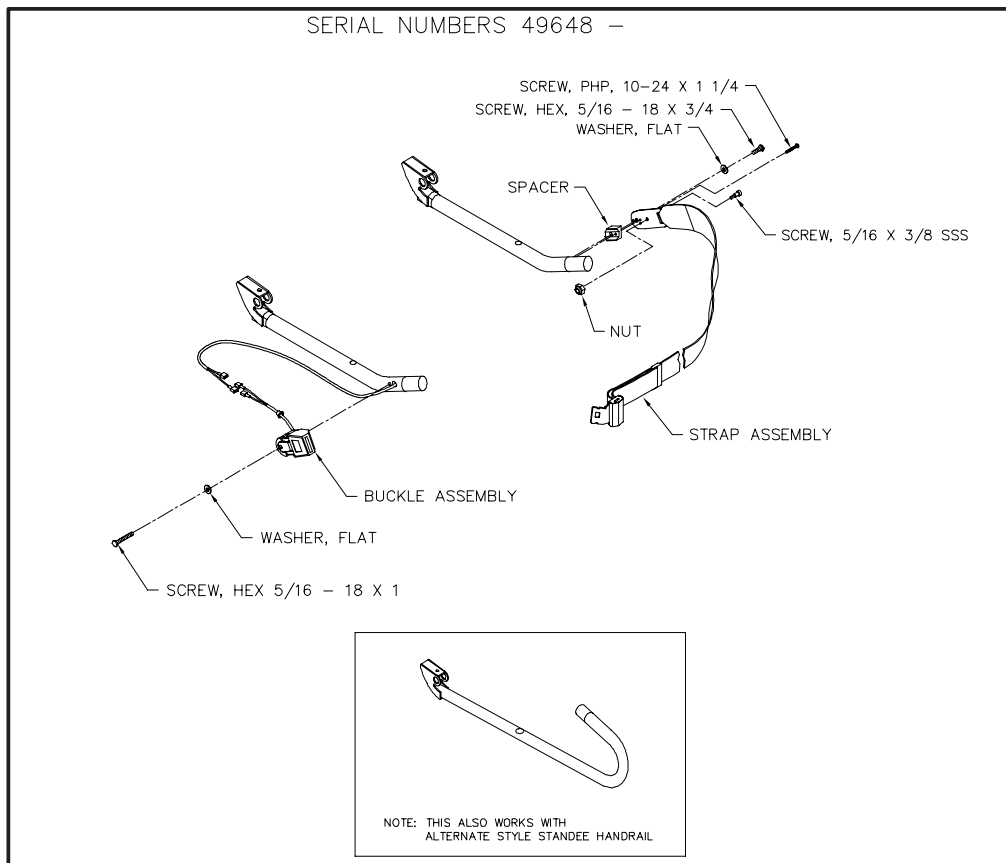

[FIG.1] INSTALLATION DETAIL DIAGRAM

- REMOVE EXISTING BUCKLE ASSEMBLY.
- REMOVE EXISTING STRAP ASSEMBLY.
- ASSEMBLE NEW BUCKLE ASSEMBLY TO HANDRAIL AS PER DIAGRAM ABOVE. TORQUE ON SCREWS NOT TO EXCEED 10FT LBS.
- INSTALL FEMALE TERMINALS TO BUCKLE ASSEMBLY IF APPLICABLE.
- ASSEMBLE NEW STRAP ASSEMBLY TO HANDRAIL AS PER DIAGRAM ABOVE. TORQUE ON SCREWS NOT TO EXCEED 10FT LBS.

NOTES